

CO2  
Sensor

# Manual for use and maintenance



## CO2 Sensor

Climate Controller

Ag/MIS/UmGB-2064-02/13 Rev 1.0

P/N: 117329

# CO<sub>2</sub> Sensor

## Manual for use and maintenance

Rev 1.9 01/2019

Ag/MIS/UmGB-2064-02/13 Rev 1.3 (MIS)

This manual for use and maintenance is an integral part of the apparatus together with the attached technical documentation.

This document is destined for the user of the apparatus: it may not be reproduced in whole or in part, committed to computer memory as a file or delivered to third parties without the prior authorization of the assembler of the system.

Munters reserves the right to effect modifications to the apparatus in accordance with technical and legal developments.

# Table of Contents

<b>1</b>	<b>INTRODUCTION</b>	<b>4</b>
1.1	Disclaimer	4
1.2	Introduction	4
1.3	Notes	4
<b>2</b>	<b>INTRODUCTION</b>	<b>5</b>
2.1	Features	5
2.2	Operating Mode	6
<b>3</b>	<b>INSTALLATION</b>	<b>7</b>
3.1	Installing the Sensor	7
3.2	Controller Connection	9
3.2.1	Platinum Wiring	9
3.2.2	Platinum Pro Wiring	10
3.2.3	AC-2000 Plus Wiring	12
3.3	Calibrating the Device	13
3.4	Disconnecting the Sensor	14
<b>4</b>	<b>MAINTENANCE AND CARE</b>	<b>15</b>
<b>5</b>	<b>SPECIFICATIONS</b>	<b>15</b>
<b>6</b>	<b>TROUBLESHOOTING</b>	<b>16</b>
<b>7</b>	<b>WARRANTY</b>	<b>17</b>

# 1 Introduction

## 1.1 Disclaimer

Munters reserves the right to make alterations to specifications, quantities, dimensions etc. for production or other reasons, subsequent to publication. The information contained herein has been prepared by qualified experts within Munters. While we believe the information is accurate and complete, we make no warranty or representation for any particular purposes. The information is offered in good faith and with the understanding that any use of the units or accessories in breach of the directions and warnings in this document is at the sole discretion and risk of the user.

## 1.2 Introduction

Congratulations on your excellent choice of purchasing an Element Controller!

In order to realize the full benefit from this product it is important that it is installed, commissioned and operated correctly. Before installation or using the fan, this manual should be studied carefully. It is also recommended that it is kept safely for future reference. The manual is intended as a reference for installation, commissioning and day-to-day operation of the Munters Controllers.

## 1.3 Notes

Date of release: Jan 2018

Munters cannot guarantee to inform users about the changes or to distribute new manuals to them.

All rights reserved. No part of this manual may be reproduced in any manner whatsoever without the expressed written permission of Munters. The contents of this manual are subject to change without notice.

## 2 Introduction

The CO<sub>2</sub> Sensor measures CO<sub>2</sub> levels in an agricultural environment. Working in conjunction with a controller, the CO<sub>2</sub> Sensor sends a signal when the measured CO<sub>2</sub> levels fall outside the user-defined specifications. This signal activates the controller's ventilation. Refer to Figure 1.

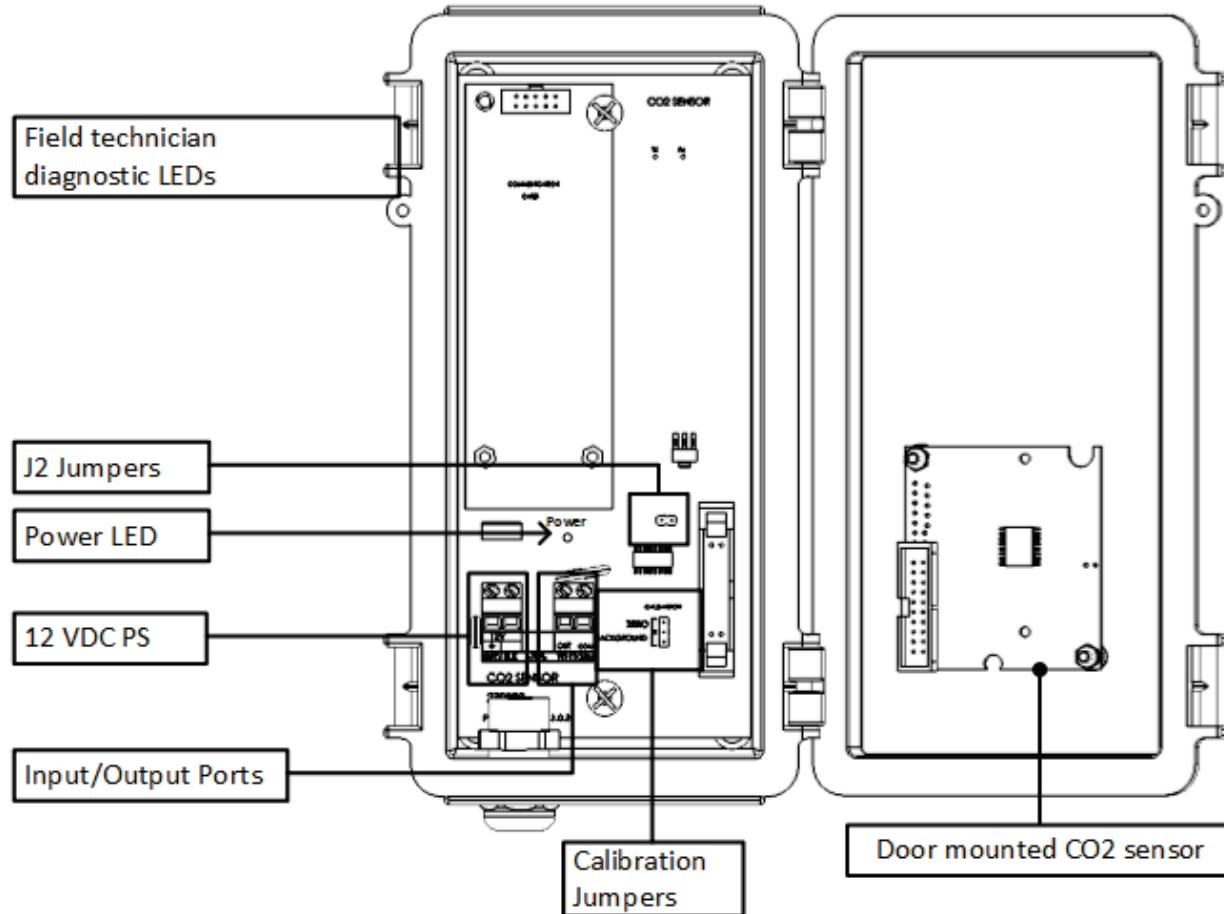


Figure 1: CO<sub>2</sub> Sensor

NOTE The unit comes supplied with a 12 VDC supply.

### 2.1 Features

- Self-contained environment and impact-resistant sealed box
- Quick open clasps
- Easy installation
- Simple to connect and configure
- Continuous uninterrupted CO<sub>2</sub> sensing
- Diagnostic LEDs
- Door-mounted sensor

## 2.2 Operating Mode

The CO<sub>2</sub> Sensor operates in a Current Loop mode (4 - 20 millamps). In this mode, the CO<sub>2</sub> Sensor provides a signal proportional to CO<sub>2</sub> levels.

NOTE Verify that J2 is not shorted (refer to Figure 2).

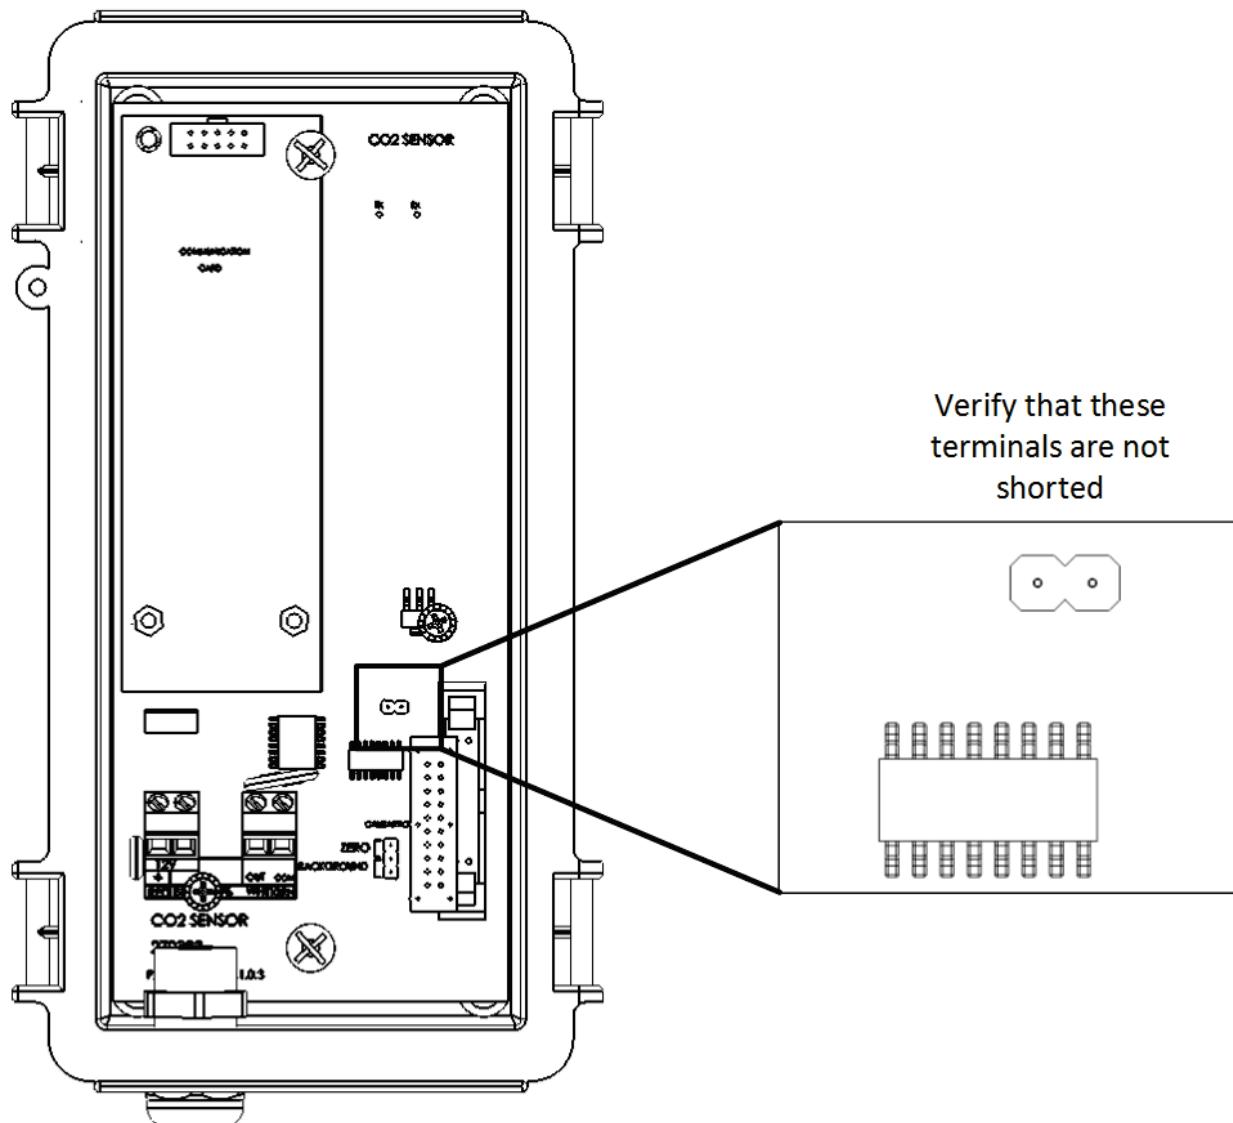


Figure 2: J2 Jumper

# 3 Installation

This section details:

- Installing the Sensor
- Controller Connection
- Calibrating the Device
- Disconnecting the Sensor

## 3.1 Installing the Sensor

The CO<sub>2</sub> Sensor comes with an extension cable that is used to:

- Connect the sensor to a power source
- Connect the sensor to the Platinum Controller (Figure 10, page 10)
- Detach the unit from the house during cleaning and maintenance procedures (Disconnecting the Sensor, page 14)

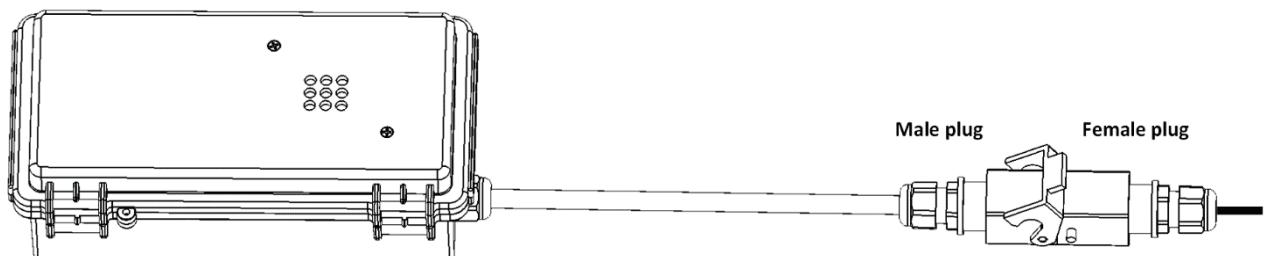


Figure 3: CO<sub>2</sub> Sensor Attached to Connector

To install the unit:

1. Mount the sensor in place.
2. On the female plug, remove the retaining screw from the protective cover (Figure 4).

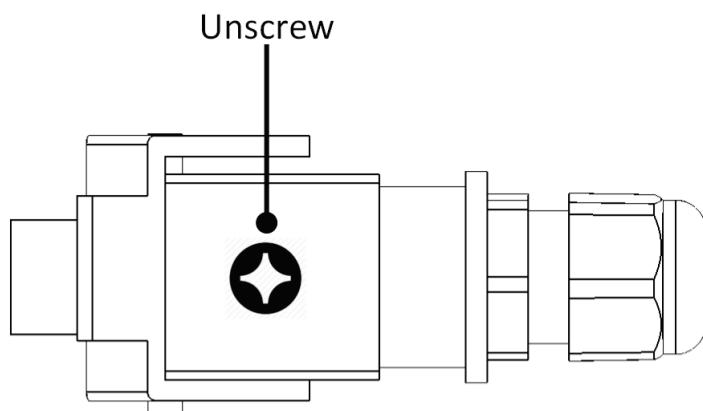


Figure 4: Protective Cover

3. Pull out the connector from the protective cover (Figure 5).

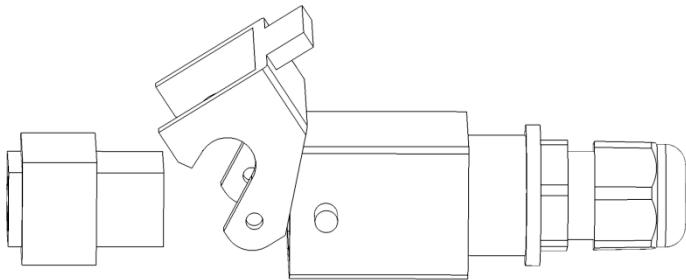


Figure 5: Remove the Connector

4. Place the cable through the protective cover (Figure 6).

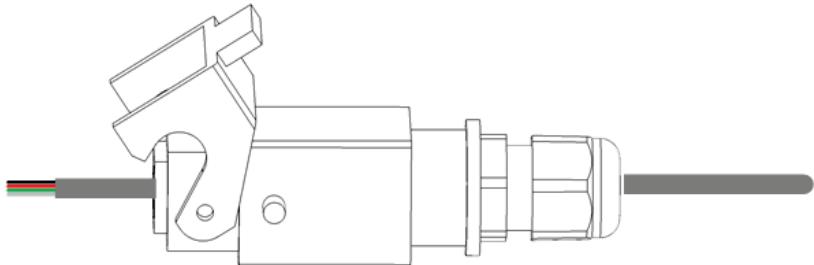


Figure 6: Threading the Cable

5. On the top of the connector are numbers (Figure 7). Each wire must be attached to the corresponding port (Table 1). Connect the four wires to the connector Figure 8.

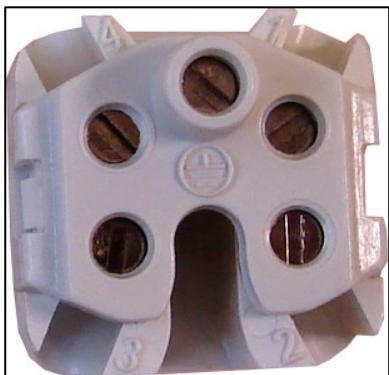


Figure 7: Connector Numbers

Table 1: Connector Port Functions

Port Number	Function	Wire Color
1	+12 V	Red
2	12 V Com (-)	Black
3	SIG Out	White
4	SIG Com	Green

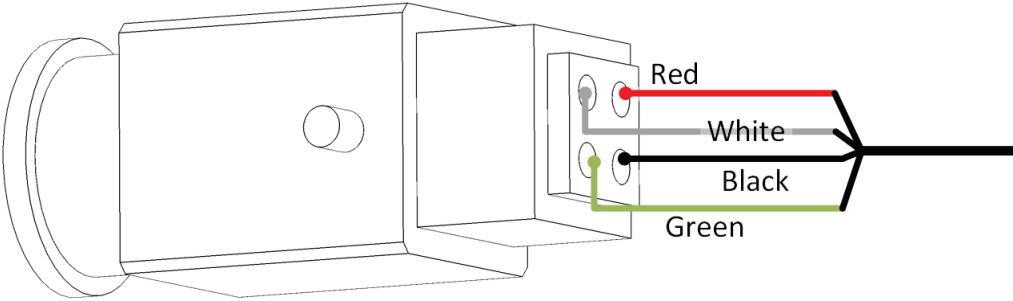


Figure 8: Wired Connector

6. Place the wired connector back into the protective cover and place the retaining screw in place (Figure 9).

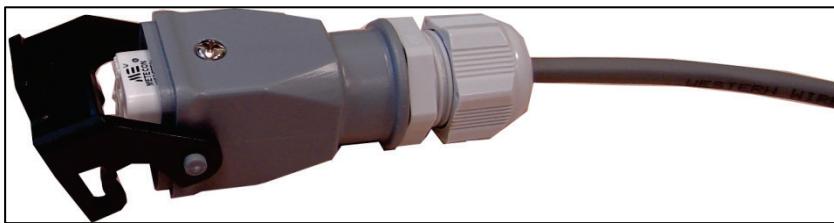


Figure 9: Wired Unit in Protective Cover

### 3.2 Controller Connection

- Platinum Wiring
- Platinum Pro Wiring
- AC-2000 Plus Wiring

#### 3.2.1 PLATINUM WIRING

1. Attach the other end of the sensor cable to the power supply and Platinum Analog Input Card as indicated in Figure 10.

2. Connect:

- CO2 COM to COM
- CO2 output signal to the T5 or T6 terminal

3. Place a jumper on the T5 or T6 pins (sets the 4 – 20 mA mode).

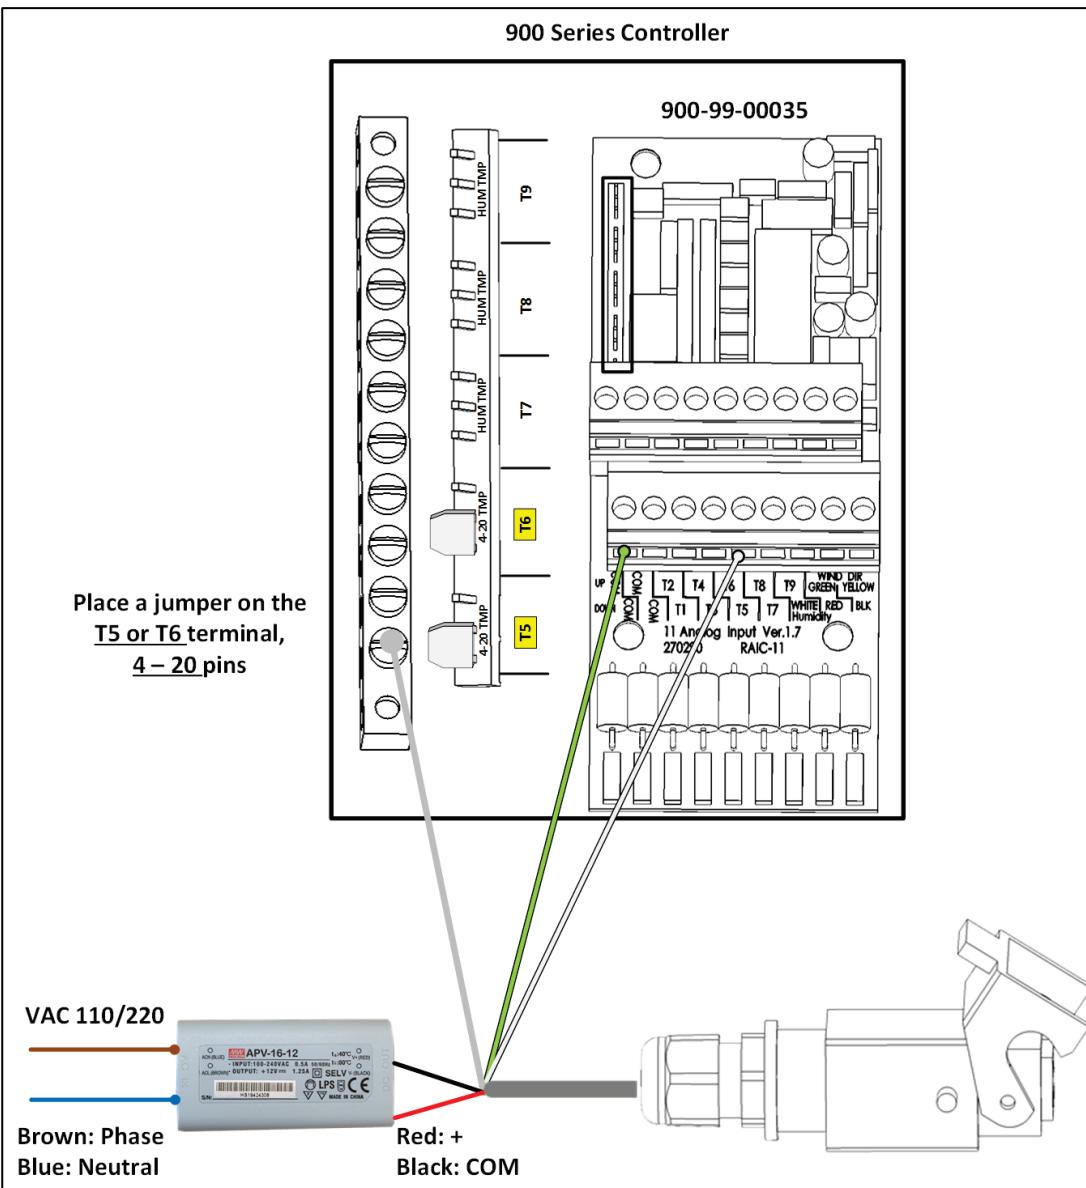


Figure 10: Platinum Power Supply Wiring

**CAUTION** Connect the shield to the safety ground.

### 3.2.2 PLATINUM PRO WIRING

1. Attach the other end of the sensor cable to the power supply and Platinum Pro Analog Input Card as indicated in Figure 11.
2. Connect:
  - CO2 COM to COM
  - CO2 output signal to an input terminal (IN 1 to IN 4)
3. Turn on DIP Switch 1 of the corresponding channel.

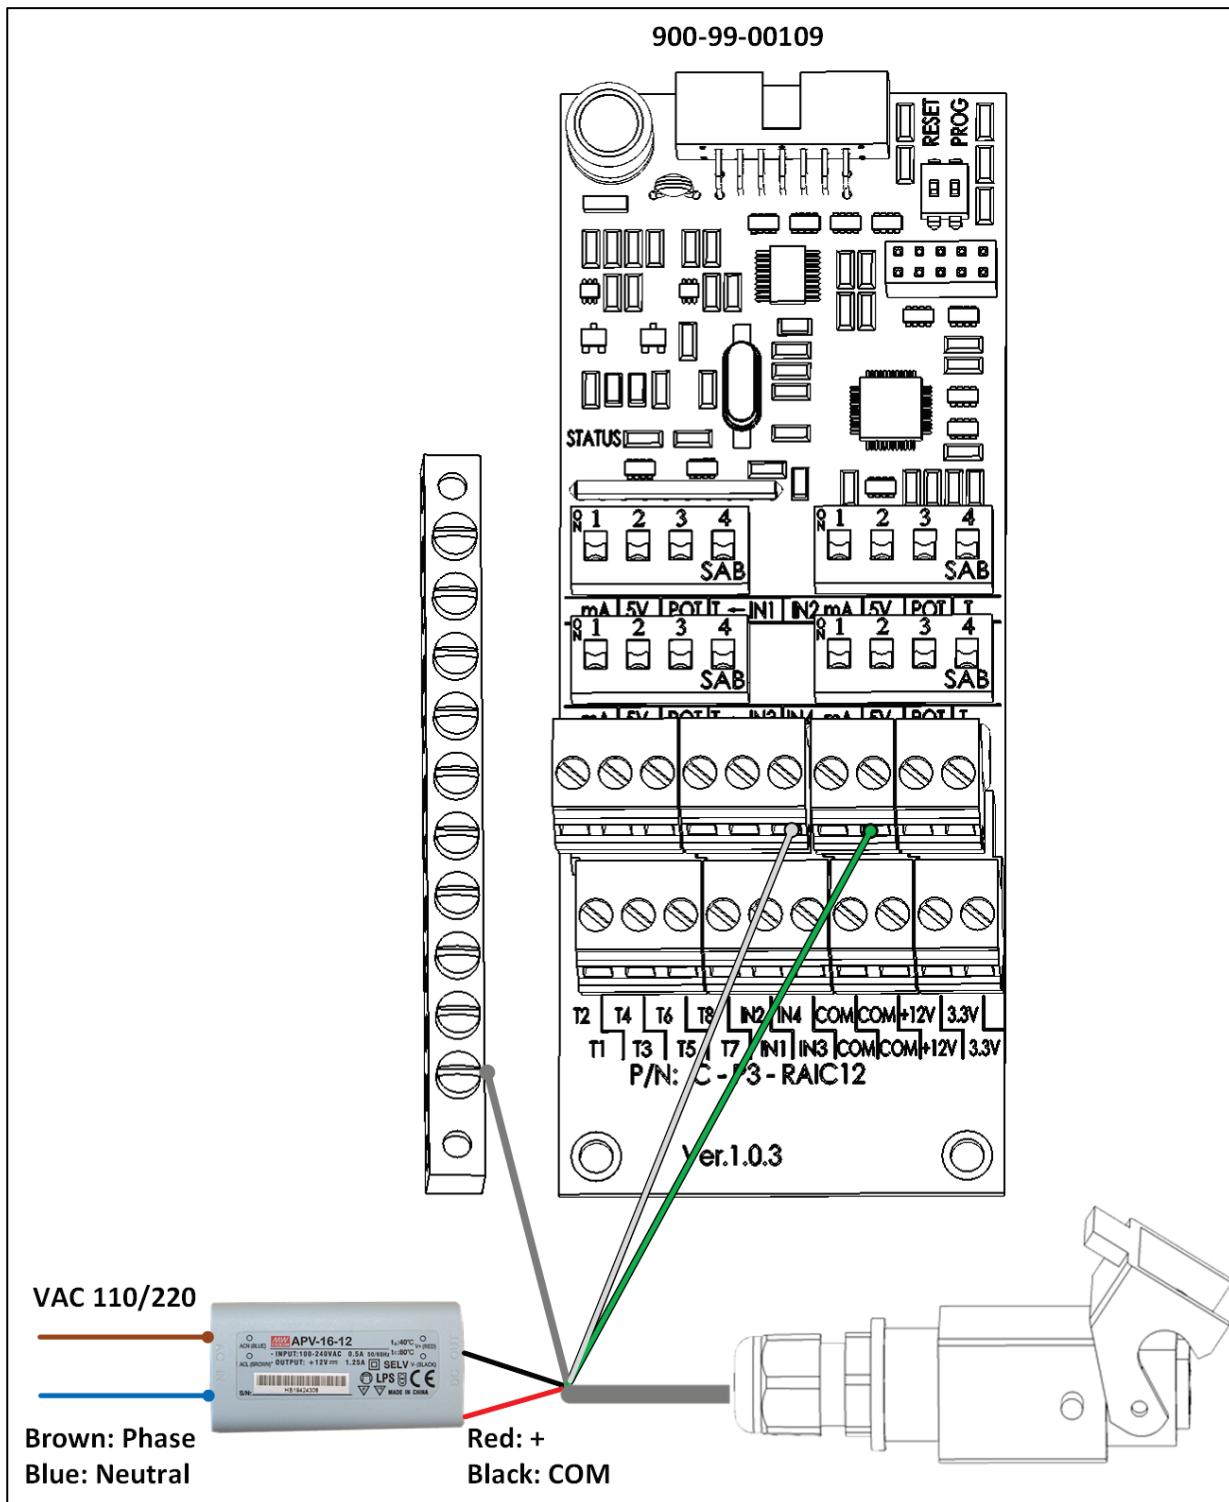


Figure 11: Platinum Pro Power Supply Wiring

**CAUTION** Connect the shield to the safety ground.

### 3.2.3 AC-2000 PLUS WIRING

- AC-2000 Plus, Version 8.11 and higher support a CO<sub>2</sub> sensor.

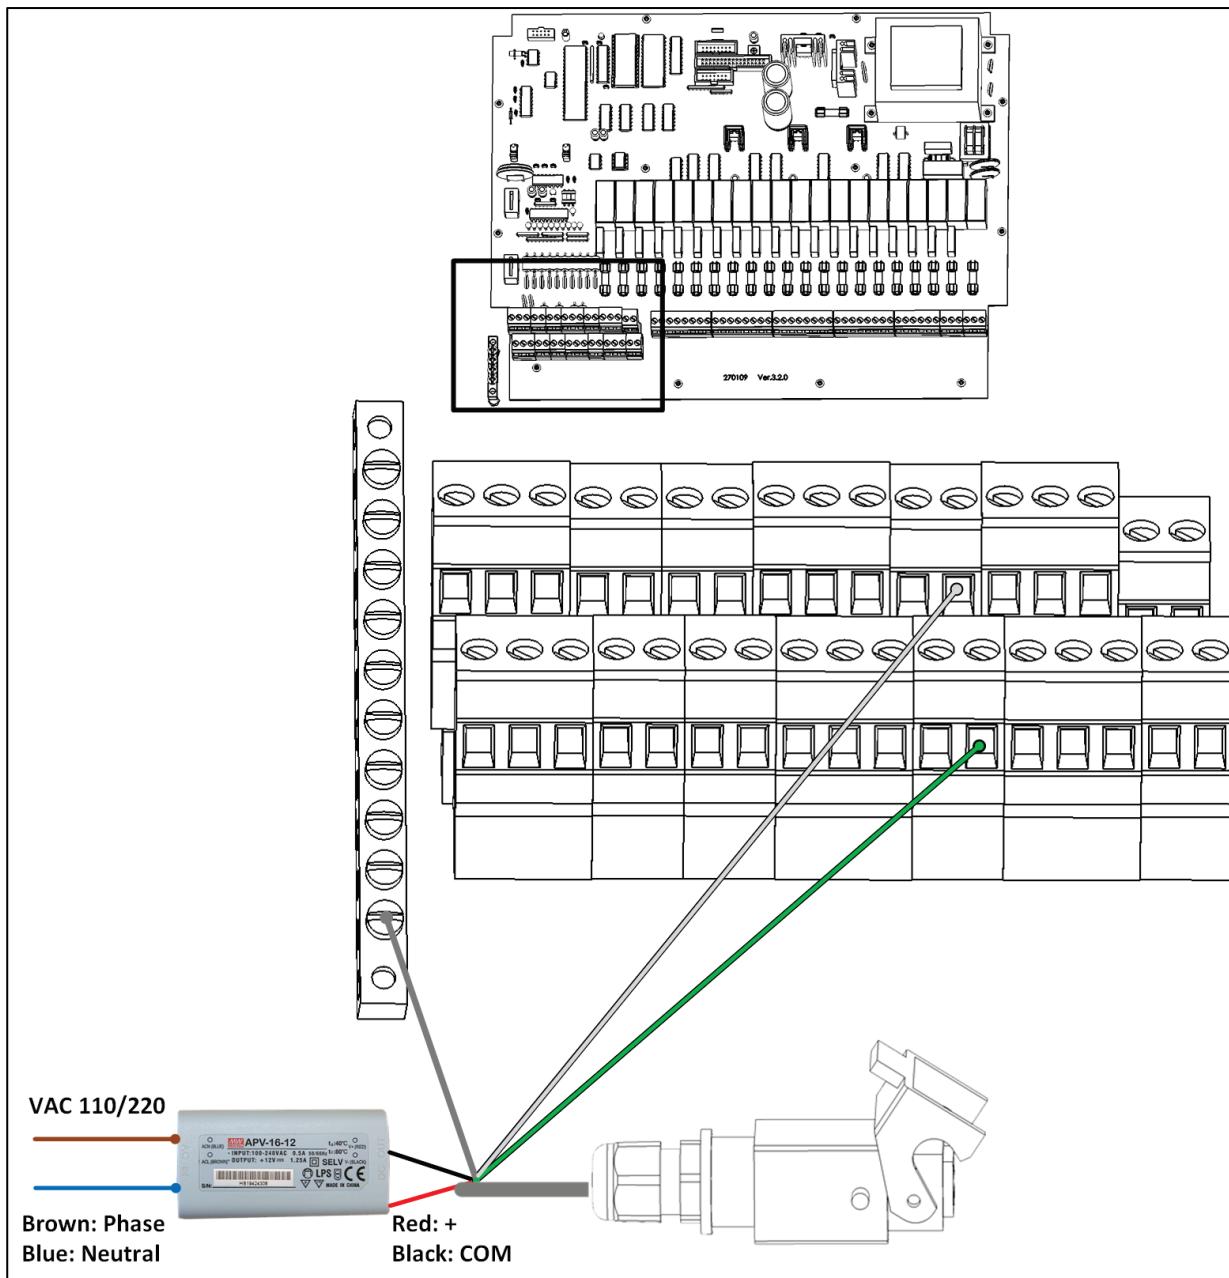


Figure 12: AC-2000 Power Supply Wiring

**CAUTION** Connect the shield to the safety ground.

### 3.3 Calibrating the Device

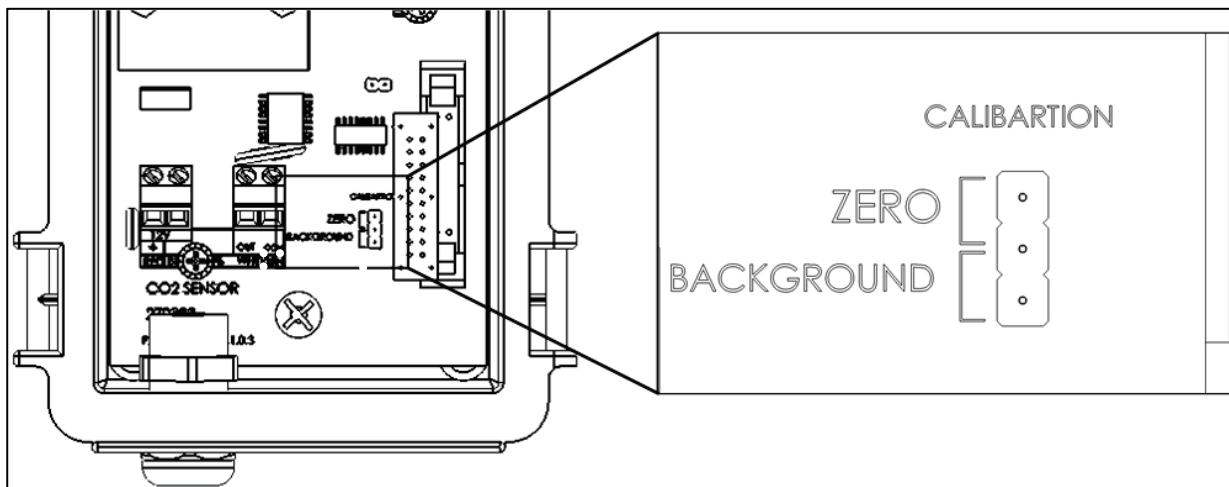


Figure 13: Jumpers

The CO2 sensor comes calibrated. In normal conditions fresh air should have approximately 350 - 450 ppm CO2. Calibrate the device if the following conditions are met:

- The CO2 sensor is exposed to fresh air or a room with open windows
- The sensor reading is above 550

**To calibrate the sensor:**

1. If connected, disconnect the device from the controller.
2. Place the sensor on a steady base (in an area with fresh air or in a room with open windows).
3. Apply 12V DC power.
4. Operate the CO2 sensor for five minutes to stabilize the device.
5. Using the supplied jumper, short the Background jumpers for 10 seconds as shown in Figure 14.

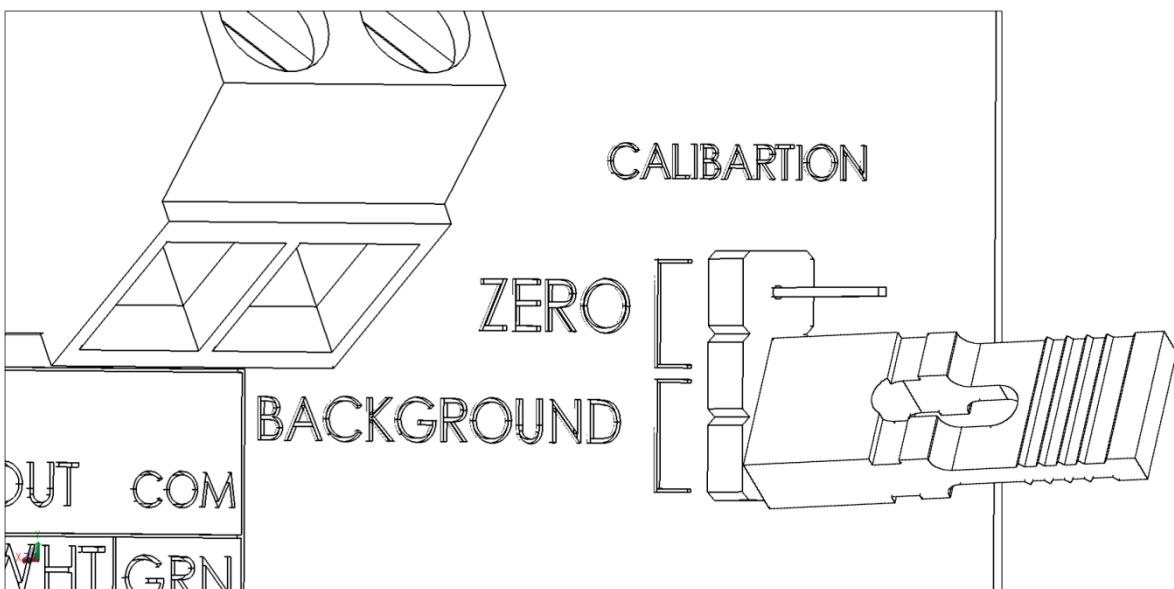


Figure 14: Shorting the Background Jumpers

6. Remove the jumper.
7. Disconnect the power and (re)connect the sensor to the controller.

**CAUTION** Do not short the Zero jumpers; they are for factory-calibration only. If shorted, remove the jumper and calibrate again.

**NOTE** If the device reading is still above 550 when exposed to fresh air, repeat the process.

### 3.4 Disconnecting the Sensor

Before cleaning the poultry/animal house, disconnect the CO<sub>2</sub> sensor.

#### To disconnect the sensor:

1. Dismount the sensor from the wall.
2. Separate the male and female plugs.

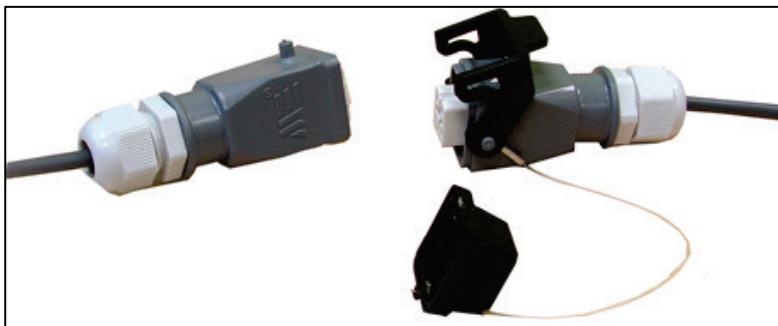


Figure 15: Plugs Separated

3. Place the plug cap on the female cap.

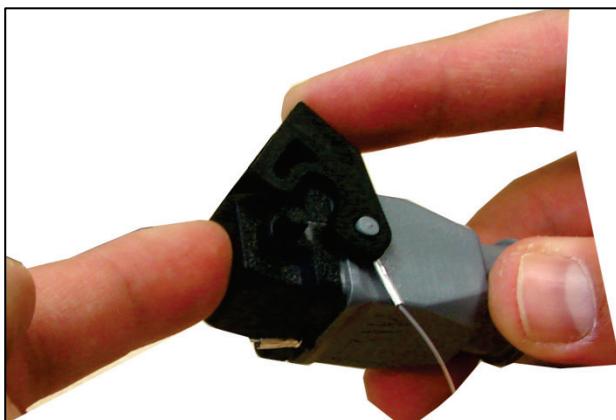


Figure 16: Cap in Place

4. Snap the cap into place.

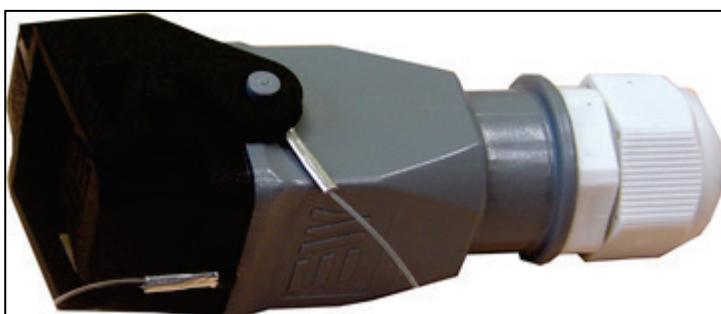


Figure 17: Cap Snapped into Place

## 4 Maintenance and Care

The CO2 Sensor requires little or no maintenance.

The following are general maintenance rules:

- Avoid damaging the CO2 Sensor box
- Avoid contact with water or other fluids (when you clean the poultry house, remove the box)
- Ensure sensor grill on front box panel is clean and clear of obstructions

**NOTE** Water may damage the sensor; therefore minimize exposure while washing, or using water for any purpose.

## 5 Specifications

<b>Input signal</b>	12 VDC
<b>Output signal</b>	4 – 20 mAmp
<b>Operating temperature</b>	10 ° - 70° C
<b>CO2 range</b>	0 – 5000 ppm
<b>Accuracy</b>	1%
<b>Maximum cable length</b>	300 meters
<b>Minimum wire size</b>	22 AWG
<b>Power supply</b>	12 VDC

# 6 Troubleshooting

The field technician diagnostic LEDs are visual diagnostic indicators for the field technician only. They are not end-user serviceable parts or indicators. Table 2 details possible system failure issues.

Table 2: CO2 Sensor System Failure Issues

Problem	Solution
The <b>Sensor Fail</b> LED is lit when CO2 sensing element fails.	Replace CO2 sensing element
The <b>Min.Fail</b> or <b>Max. Fail</b> LED is lit: The sensor is out of acceptable range.	Replace CO2 sensing element
If the diagnostic LEDs are lit (D2, R12), indicates that the circuit may be incomplete.	Check circuitry for breaks
Readings are off the scale, even when fresh air is present.	Verify that there is a jumper on the Platinum Analog card, placed on T5 or T6, set for 4 – 20 mA (refer to Figure 10).
Readings are lower than expected.	Remove jumper from J2 terminal (refer to Figure 2).
Power LED remains unlit	Check if power/COM wiring has been reversed (refer to Table 1).

# 7 Warranty

## Warranty and technical assistance

Munters products are designed and built to provide reliable and satisfactory performance but cannot be guaranteed free of faults; although they are reliable products they can develop unforeseeable defects and the user must take this into account and arrange adequate emergency or alarm systems if failure to operate could cause damage to the articles for which the Munters plant was required: if this is not done, the user is fully responsible for the damage which they could suffer.

Munters extends this limited warranty to the first purchaser and guarantees its products to be free from defects originating in manufacture or materials for one year from the date of delivery, provided that suitable transport, storage, installation and maintenance terms are complied with. The warranty does not apply if the products have been repaired without express authorization from Munters, or repaired in such a way that, in Munters' judgment, their performance and reliability have been impaired, or incorrectly installed, or subjected to improper use. The user accepts total responsibility for incorrect use of the products.

The warranty on products from outside suppliers fitted to CO<sub>2</sub> sensor Premium, (for example analog inputs, cables, etc.) is limited to the conditions stated by the supplier: all claims must be made in writing within eight days of the discovery of the defect and within 12 months of the delivery of the defective product. Munters has thirty days from the date of receipt in which to take action, and has the right to examine the product at the customer's premises or at its own plant (carriage cost to be borne by the customer).

Munters at its sole discretion has the option of replacing or repairing, free of charge, products which it considers defective, and will arrange for their dispatch back to the customer carriage paid. In the case of faulty parts of small commercial value which are widely available (such as bolts, etc.) for urgent dispatch, where the cost of carriage would exceed the value of the parts, Munters may authorize the customer exclusively to purchase the replacement parts locally; Munters will reimburse the value of the product at its cost price.

Munters will not be liable for costs incurred in demounting the defective part, or the time required to travel to site and the associated travel costs. No agent, employee or dealer is authorized to give any further guarantees or to accept any other liability on Munters' behalf in connection with other Munters products, except in writing with the signature of one of the Company's Managers.

**WARNING!** *In the interests of improving the quality of its products and services, Munters reserves the right at any time and without prior notice to alter the specifications in this manual.*

The liability of the manufacturer Munters ceases in the event of:

- dismantling the safety devices;
- use of unauthorized materials;

- inadequate maintenance;
- use of non-original spare parts and accessories.

Barring specific contractual terms, the following are directly at the user's expense:

- preparing installation sites;
- providing an electricity supply (including the protective equipotential bonding (PE) conductor, in accordance with CEI EN 60204-1, paragraph 8.2), for correctly connecting the equipment to the mains electricity supply;
- providing ancillary services appropriate to the requirements of the plant on the basis of the information supplied with regard to installation;
- tools and consumables required for fitting and installation;
- lubricants necessary for commissioning and maintenance.

It is mandatory to purchase and use only original spare parts or those recommended by the manufacturer. Dismantling and assembly must be performed by qualified technicians and according to the manufacturer's instructions.

The use of non-original spare parts or incorrect assembly exonerates the manufacturer from all liability.

Requests for technical assistance and spare parts can be made directly to the nearest Munters office. A full list of contact details can be found on the back page of this manual.

#### [\*\*Munters USA\*\*](#)

2691 Ena Drive  
 Lansing, MI 48917-8521  
 United States  
 Tel: +1 517 676 7070  
 Toll Free: +1 800 227 2376  
 Fax: +1 517 676 7078  
 Email: [aghort.info@munters.com](mailto:aghort.info@munters.com)



[www.munters.com](http://www.munters.com)

**Australia** Munters Pty Limited, Phone +61 2 8843 1594, **Brazil** Munters Brasil Industria e Comercio Ltda, Phone +55 41 3317 5050, **Canada** Munters Corporation Lansing, Phone +1 517 676 7070, **China** Munters Air Treatment Equipment (Beijing) Co. Ltd, Phone +86 10 80 418 000, **Denmark** Munters A/S, Phone +45 9862 3311, **India** Munters India, Phone +91 20 3052 2520, **Indonesia** Munters, Phone +62 818 739 235, **Israel** Munters Israel Petach Tikva +972 3 920 6200, **Italy** Munters Italy S.p.A., Chiusavecchia, Phone +39 0183 52 11, **Japan** Munters K.K., Phone +81 3 5970 0021, **Korea** Munters Korea Co. Ltd., Phone +82 2 761 8701, **Mexico** Munters Mexico, Phone +52 818 262 54 00, **Singapore** Munters Pte Ltd., Phone +65 744 6828, **South Africa and Sub-Saharan Countries** Munters (Pty) Ltd., Phone +27 11 997 2000, **Spain** Munters Spain S.A., Phone +34 91 640 09 02, **Sweden** Munters AB, Phone +46 8 626 63 00, **Thailand** Munters Co. Ltd., Phone +66 2 642 2670, **Turkey** Munters Form Endüstri Sistemleri A.Ş, Phone +90 262 751 37 50, **USA** Munters Corporation Lansing, Phone +1 517 676 7070, **Vietnam** Munters Vietnam, Phone +84 8 3825 6838, **Export & Other countries** Munters Italy S.p.A., Chiusavecchia Phone +39 0183 52 11