



Input Card
(Part #:784ANOUPRO)

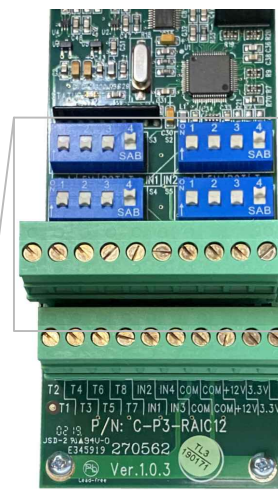

***WOD Pro must be wired to IN1, IN2, IN3, or IN4. It cannot be wired to T1-T8**

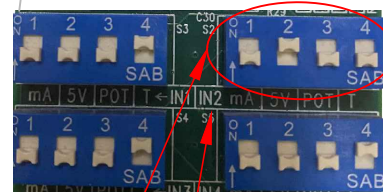

Dip Switch Key



- 1: mA
- 2: 5V
- 3: POT
- 4: Temp

Set Your Dip Switch
Switch 2: On (Up)
Switch 4: Off (Down)

*** Select dip switch based on actual wired input**
(Example Pictured: IN2)



Analog Output Card
(Part #: 784ANACPRO)

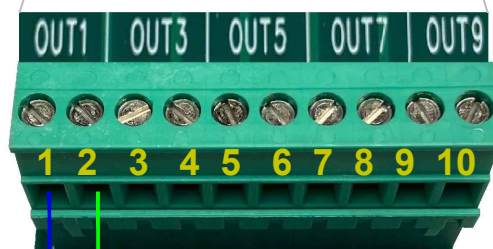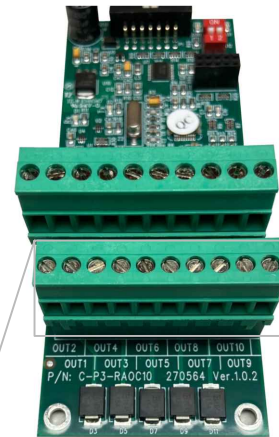

OUT1 to A1

OUT1 to AC

IN2 to AM

COM to AC

Yaskawa Frequency Drive
(Part #: 2350007)



+V to 1

A2 to 2




W1

V1

U1

*** If rotation is backwards switch V1 and U1 wire connections**

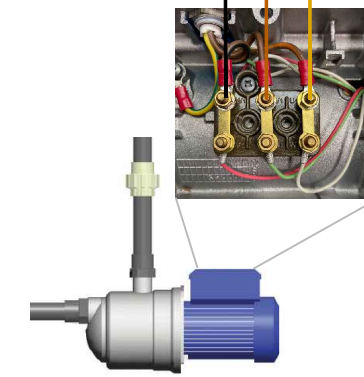

Water Pump
(Part #: 2209029)



Motor Rotation Arrows

*** Motor must rotate clockwise**



Pressure Sensor
(Part #: 2205279)

WOD Pro Wiring Diagram
Rotem One/Pro & Platinum Pro